




Bulkhead Kit Instructions



Congrats on your new terrain! Setup is easy. I recommend regular wood glue. Super glue works as well. Also, don't forget the **candle wax**. More on that below.

1. Each bulkhead uses three bulkhead clips, shown here. One clip comes in two pieces, shaped like J's.

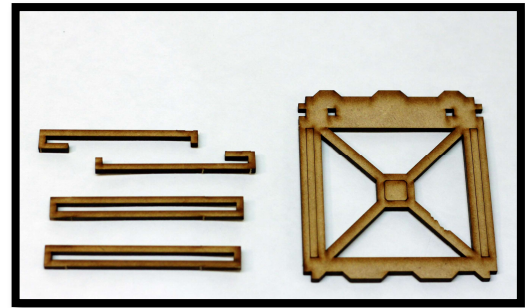

2. Start with a bulkhead, and the two "J" shaped clips. Fit them into the notch near the top (the bulkhead in the pic is upside down for easier visibility) then into the hole, as shown in the picture. They snap fit, and you can add glue if you wish, but it's not needed.

3. Run a bead of glue across the top and bottom of the bulkhead. Fit one of the solid clips on the top, and the other on the bottom. Wipe away excess glue, especially in the channel between the top two clips. Repeat these steps for all bulkheads.

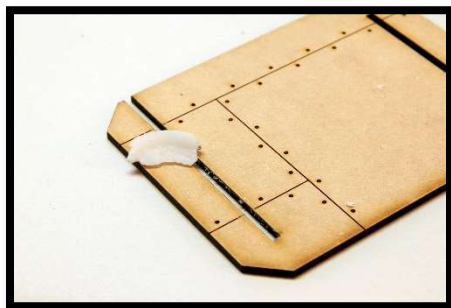
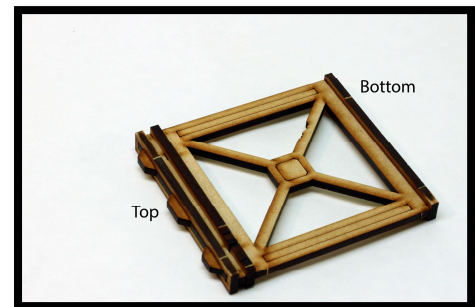


4. Before you slide the bulkheads onto the floors, rub some candle wax on the channels. You can put it on both the floors and the bulkheads. **Skipping this step can lead to broken pieces, frustration, then sadness.** The fits are tight at first, but loosen up a bit over time.

Thanks for your purchase from Promethium Forge.
May it ever block your enemy's line of sight, and not yours. Check back often for new releases.

Bulkhead Kit Instructions


5. Glue two clips to the top of each ladder. The clips are symmetrical, so it doesn't matter which side you glue.

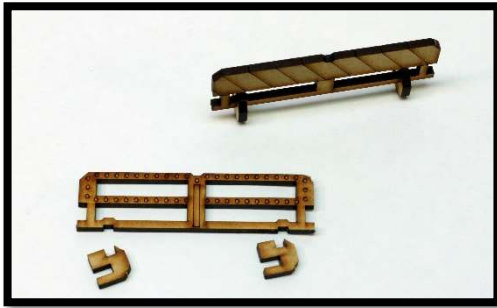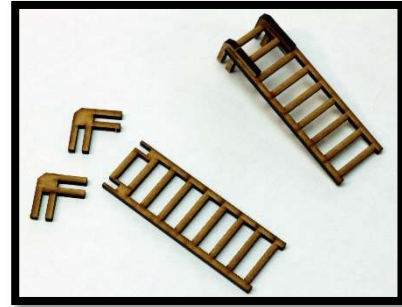

6. Glue the feet to the railings.



7. Glue the clips onto the walkways.

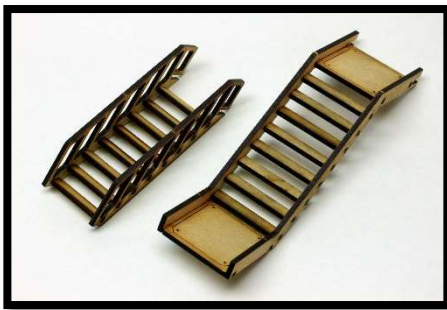

8. To assemble the stairs, lay out one side piece, place dots of glue by the step holes, then insert all the steps. Choose if you want the rounded or straight edge forward. Then fit the other side piece on from above. Note that there are two different widths of steps. The wider steps go with the slant gantries, and the narrower go with the staircases.

9. When it's time to paint, mask the contact areas of the bulkheads and the floors. This will ensure your pieces fit together and come apart. Just run a strip of tape, and follow the etch lines with your knife. I recommend starting with Rust-Oleum Automotive 2 in 1 Filler and Primer. Two light coats do the trick and won't fill in the etched details.



10. Now post pictures of your amazing terrain to social media. You deserve the recognition for a job well done!

Thanks for your purchase from Promethium Forge.
May it ever block your enemy's line of sight, and not yours. Check back often for new releases.